



零件代号

借(通)用件登记

旧底图总号

底图总号

签字

日期

1	Shaft	1	12	Outlet	1	23	Pipe of motor	1	34	Screw	1
2	Impeller	8	13	Check valve	1	24	Oil chamber	1	35	"O"ring	1
3	Diffuser	8	14	Shaft coupling	1	25	Bearing seat	1	36	Screw	4
4	Regulsting washer	8	15	Bushing	1	26	Expand sleeve	1	37	Screw	4
5	Diffuser cover	8	16	Shaft sleeve	1	27	End cover	1	38	Mechanical seal	1
6	bracket	1	17	Plastic pads	2	28	Clamping spring	2	39	Cable	1
7	Rubber bearing	2	18	Cable clamp	1	29	<b>Rotor of motor</b>	1	40	Screw	2
8	Suction support	1	19	Screw	5	30	Bearing	2	41	stainless steel ring	1
9	Screen	1	20	Screw	1	31	Oil seal	1	42	capacitance	1
10	Support	1	21	Screw	4	32	"O"ring	2	43	Cable shield sleeve	1
11	Pump body	1	22	Screw	2	33	Stator of motor	1	44		

92 deep well pump  
overall explosion  
view

92 deep well pump  
motor

替代